



Telford Sailing Club Use of Generator Policy



Version 1.1: 8th Sept 2025.

Version Control

Version	Changes	Changes made by	Approved by / date
1.1	Revised Document updated logo	Manuel Greenwood	08/09/2025

Use of the Generator

The Generator is stored in the new container and should be used with it in situ.
It is not to be moved for general use.

During use of the Generator, the doors of the container are to be fixed slightly open, using the wooden door stops on both doors to ensure free ventilation. For security, the doors should be locked when in the working position using a long cable lock (185cm).

The chassis of the generator is also locked to the tie down loop behind the generator.

Re-fuelling.

Before refuelling, both container doors must be fully opened and secured in that position, to ensure they are not blown closed by the wind.

After the refuelling has been completed there should be a break of 5–10 minutes to allow vapours to disperse, before the container doors are closed or partially closed.

Storage of fuel

No fuel is to be stored in the container. Refuelling is to be carried out by members bringing fuel in cans and then removing the cans from the container.

Safety

Alongside the Generator there is a Fire Extinguisher and a Fire Bucket with special absorbent sand to be used in the event of a Fuel Spill.